

KG316T Timer Switch Using Steps

Step 1 Lock or unlock this timer



1. Keyboard lock operation:

Press the "RESET" key 4 times in succession.

After locking, a "☐" symbol will appear in the lower left corner of the display.

The keyboard enters the locked state and general operations are not accepted at this time.

2. Keyboard unlock operation:

Press the "RESET" key 4 times repeatedly.

The "☐" symbol disappears, the keyboard is unlocked, and normal operation is restored.

3. Automatic lock mechanism:

If no operation is performed, the keyboard will automatically enter the locked state after 15 seconds.



www.lorentzzi.com

Step 2 Set your local time accurately



While the clock is running, press the "Hour", "Minute", and "Week" buttons respectively to set the hour, minute, and week to your local time.

KG316T Timer Switch Using Steps

Step 3 Set the start time



Enter the timing function

Press the "TIMING" button, the device will enter the timing setting mode, and "1 on" will be displayed (indicating the first timing task).

Set the start time

Press the "HOUR" button to adjust the hours.
Press the "MINUTE" button to adjust the minutes.

Set the working days

Press the "WEEK" button to select the days of the week when the timing task needs to take effect.



www.lorentzzi.com

Step 4 Set the off time



Enter the timing function

Press the "TIMING" button again, the device will enter the timing setting mode, and "1 off" will be displayed (indicating the first timing off task).

Set the start time

Press the "HOUR" button to adjust the hours.
Press the "MINUTE" button to adjust the minutes.

Set the working days

Press the "WEEK" button to select the days of the week when the timing task needs to take effect.

KG316T Timer Switch Using Steps

Step 5 Set the remaining 15 on/off time



Repeat the above timing settings to set the remaining 2 on, 2 off...16 on 16 off switching times.

Press the "Clock" key to end the time setting and return to the clock running state.

Press the "Manual/Auto" key to realize manual on/off control of the load.



www.lorentzzi.com

Step 6 Notice



If the local time is outside your setting range (e.g. local time is 15:00 and the working time is 16:00-16:30), please press the "Manual/Auto" key to "On→Auto".

If the clock time is within your setting range (e.g. local time is 15:00 and the working time is 14:00-14:30), please press the "Manual/Auto" key to "Off→Auto:"